




Installation Instructions for SLAT WALL COVERS

2 methods of installation: **1 SLIDE** OR **2 SNAP** (see illustrations below)

Position top leg up.



1 SLIDE cover on from the end of the panel.

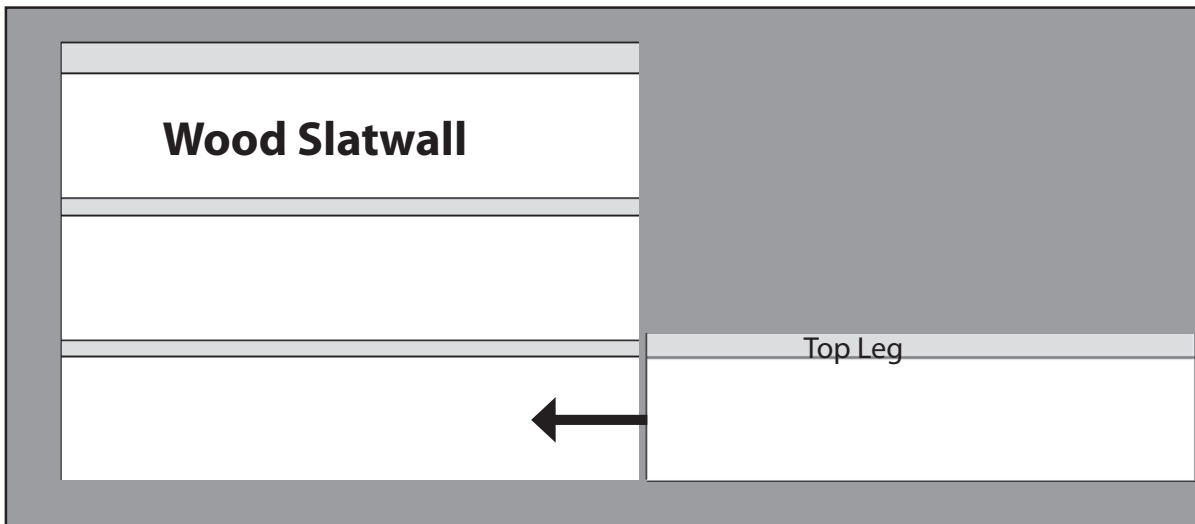

OR

2 SNAP covers over existing wood slatwall

A

Always start at the bottom of your slatwall panel and work up.

Slide the vertical leg up and in.

B

Push in where arrow points and pull down on the plastic cover.

C

Push in on bottom of plastic cover to secure on wood slatwall.

Repeat process.

Jifram Extrusions Inc.

www.jifram.com

920-467-2477